


SVEN[®]

Portable Speaker System
with Bluetooth and FM-radio

USER MANUAL

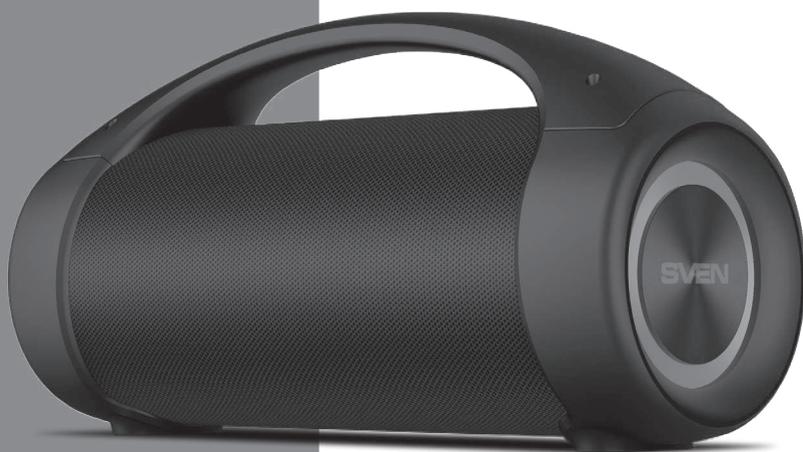

PS-370

www.sven.fi

Congratulations on your purchase of the SVEN speaker system!**COPYRIGHT**

© 2021. SVEN PTE. LTD. Version 1.0 (V 1.0).

This Manual and information contained in it are copyrighted. All rights reserved.

TRADEMARKS

All trademarks are the property of their legal holders.

NOTICE OF RESPONSIBILITY RESTRICTION

Despite the exerted efforts to make this Manual more exact, some discrepancies may occur. The information in this Manual is given on «as is» terms. The author and the publisher do not bear any liability to a person or an organization for loss or damage which has arisen from the information contained in this Manual.

BUYER RECOMMENDATIONS

- Unpack the device carefully. Make sure there are no accessories left in the box. Check up the device for damage; if the product was damaged during transportation, address the firm which carried out the delivery; if the product functions incorrectly, address the dealer at once.
- Check up the package contents and availability of the warranty card. Make sure the warranty card has a shop stamp, a legible signature or the seller's stamp and purchase date, and the goods number corresponds to that in the warranty card. Remember: in case of warranty card loss or discrepancy of numbers you forfeit the right for warranty repairs.
- Before installing and using the speaker system, read this Manual carefully and keep it for future reference.
- Shipping and transportation equipment is permitted only in the original container.
- Does not require special conditions for realization.
- Dispose of in accordance with regulations for the disposal of household and computer equipment.

APPLICATION

SVEN PS-370 portable multimedia speaker system with Bluetooth and FM-radio is designed for operation with PC, notebooks and other mobile devices by means of data transfer via Bluetooth protocol. It can be also used in internet telephony, during video conferences, in multimedia applications, in interactive games. There is a built in FM-tuner, and player with USB flash memory card.

PACKAGE CONTENTS

- Speaker system — 1 pc
- USB to Type-C power cable — 1 pc
- Antenna/mini-jack to mini-jack signal cable — 1 pc
- User Manual — 1 pc
- Warranty card — 1 pc

Technical support is on www.sven.fi.

SPECIAL FEATURES

- Bluetooth wireless signal transmission
- Built-in audio files player from USB-flash card storage devices
- Built-in FM tuner
- Wired connection
- Waterproof (IPx5)
- Wireless connection of two speakers to one source

Speaker system description

- ① Indicator
- ② : Connecting an additional speaker (long pressing in Bluetooth mode)
- ③ : Play/Pause button (in Player and Bluetooth mode);
Start/Stop auto scan (long pressing in Radio mode);
Mute (short pressing in Radio mode or AUX);
Disconnect from device (long pressing in Bluetooth mode)
- ④ : Volume increase button (short pressing);
Next track (long pressing in Player and Bluetooth mode);
Next station (long pressing in Radio mode)
- ⑤ AUX: 3.5 mm mini-jack for audio signal connecting (phone, MP3 player, etc.)
- ⑥ DC 5V: USB Type C jack for charger connecting speaker system to laptop/PC USB port
- ⑦ : POWER button (long pressing)
- ⑧ : Switch mode button: Bluetooth/FM/Player/AUX (short pressing);
ON/OFF backlight (long pressing)
- ⑨ : Volume decrease button (short pressing);
Previous track (long pressing in Player and Bluetooth mode);
Previous station (long pressing in Radio mode)
- ⑩ USB: USB-flash card slot

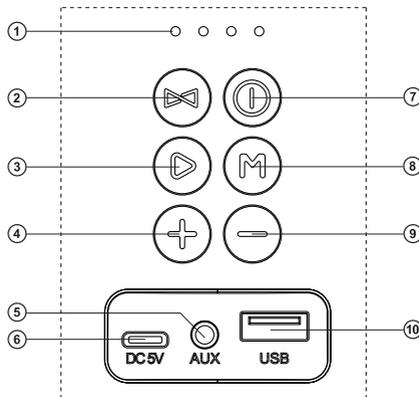


Fig. 1.

CONNECTION AND OPERATION

Attention! The built-in battery must be charged completely prior to the application.

Speaker system battery charging

- Connect speaker system to a USB port of PC or USB charger using USB Type-C to USB cable (included). During battery charging the indicator ① flashes and shows the charge level.
- The battery is used in the speaker system as an integral part of the device, therefore do not try to extract or replace it, because this can result in the warranty cancellation or the device damage.

OPERATION MODES**Bluetooth mode**

- Wireless data transfer via the Bluetooth protocol enables to connect speaker system to compatible devices. Maximum radius of action of data transfer is 10 m. Such obstacles as walls or other electronic devices can interfere with the signal transfer.
- Turn on the speaker in Bluetooth mode.
- It is necessary to select the search mode of devices with Bluetooth on a signal source (telephone, notebook, smartphone, etc.). «SVEN PS-370» message will be displayed on the screen which is to be connected to*.
- When connection is successful, there will be a short beep and the indication of the search mode on speaker system is over**.

Radio mode

Attention! To improve the quality of radio reception, connect the mini-jack signal cable to the mini-jack (included) to the AUX input or cable USB to USB Type-C (included) to the USB input.

- Turn on the speaker system – press button ⑧ several times until, the radio mode will turn on. Long-term pressing button ③ activates auto search mode. After scanning completion, the first scanned radio station will start to operate automatically. With buttons ④ and ⑨ (long pressing) select a desired radio station.

Player mode

- The system will enter the Player mode automatically when USB flash is connected. Use button ③ to switch between Play/Pause modes. You can control tracks by using buttons ④ (previous track) and ⑤ (next track) (long pressing).

The use in the wired mode (AUX)

- Connect the 3.5 mm mini-jack cable to the 3.5 mm mini-jack (included) to the AUX input and the 3.5 mm jack to the signal source.
- Turn on the speaker in AUX mode – press the button ⑧ several times until the speaker goes into AUX mode.

* You might have to enter «0000» code to connect some models of devices via Bluetooth.

** If the item has been already registered in the device list of a source, then the second search mode activation is not obligatory. Choose the item name «SVEN PS-370» and the «connect» command on the source.

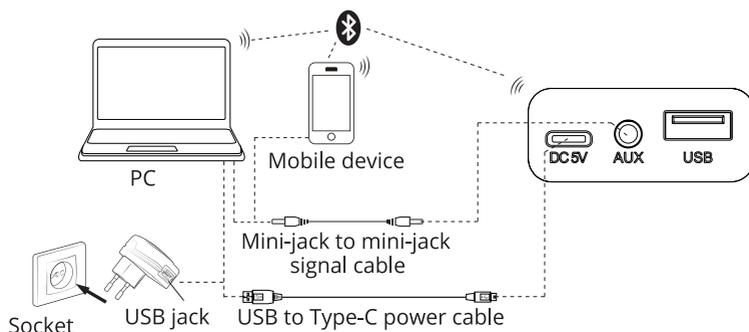


Fig. 2. Connection diagram

Connecting an additional speaker

For model PS-370 you can connect an additional speaker (Bluetooth mode only):

- Turn both speakers into Bluetooth mode;
- Make sure both PS-370s are not connected to a signal source via Bluetooth;
- Press and hold button ② on both speakers. (Both speakers must be in search mode);
- If two speakers are successfully connected between themselves, there will be a short beep;
- Connect the signal source to the speaker.

TECHNICAL SPECIFICATIONS

Parameter, measurement unit	Value
Frequency response, Hz	70 - 20 000
Output power (RMS), W	40 (2 × 20)
Membrane, mm	∅ 70
Rated current consumption, A	0.25
Battery capacity, mA * h	3600 (2 pcs)
Power supply	USB/ --- 5V
Weight, g	2500
Dimensions, mm	360 × 147 × 190

Notes:

- **Technical specifications given in this table are supplemental information and cannot give occasion to claims.**
- **Technical specifications and package contents are subject to change without notice due to the improvement of SVEN production.**

Technical support is on www.sven.fi.

Portable Speaker System
with Bluetooth and FM-radio

SVEN®



Model: PS-370

Импортер в России: ООО «Регард», 105082, г. Москва, ул. Фридриха Энгельса, д.75, стр. 5. Уполномоченная организация в России: ООО «РТ-Ф», 105082, г. Москва, ул. Фридриха Энгельса, д. 56, стр. 1. Условия гарантийного обслуживания смотрите в гарантийном талоне или на сайте www.sven.fi. Гарантийный срок: 12 мес. Срок службы: 2 года. Производитель: «СВЕН ПТЕ. Лимитед», 176 Джу Чиат Роуд, № 02-02, Сингапур, 427447. Произведено под контролем «Свен Скандинавия Лимитед», 48310, Финляндия, Котка, Котolahdentie, 15. Сделано в Китае.

Manufacturer: SVEN PTE. LTD, 176 Joo Chiat Road, № 02-02, Singapore, 427447.
Produced under the control of Oy Sven Scandinavia Ltd. 15, Kotolahdentie, Kotka, Finland, 48310. Made in China.

® Registered Trademark
of Oy SVEN
Scandinavia Ltd. Finland.



PS-370