


USER'S MANUAL

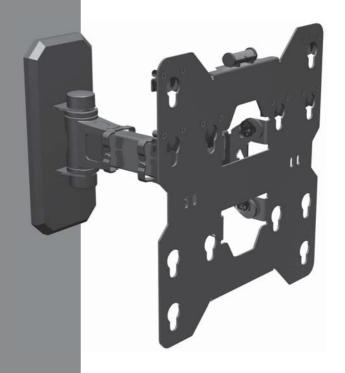

C77-22

www.sven.fi

User's Manual

C77-22

Congratulations on your purchase of the Sven wall mount!

COPYRIGHT

© 2015. SVEN PTE. LTD. Version 1.0 (V 1.0).

This Manual and information contained in it are copyrighted. All rights reserved.

TRADEMARKS

All trademarks are the property of their legal holders.

NOTICE OF RESPONSIBILITY RESTRICTION

Despite the exerted efforts to make this Manual more exact, some discrepancies may occur. The information in this Manual is given on «as is» terms. The author and the publisher do not bear any liability to a person or an organization for loss or damage which has arisen from the information contained in this Manual.

CONTENTS

1. BUYER RECOMMENDATIONS	1
2. APPLICATION	2
3. SAFETY PRECAUTIONS	2
4. SPECIAL FEATURES	2
5. PACKAGE CONTENTS	2
6. MOUNTING AND INSTALLATION	3
7. TECHNICAL SPECIFICATIONS	5

1. BUYER RECOMMENDATIONS

- Unpack the device carefully. Make sure there are no accessories left in the box. Check up the device for damage; if the product was damaged during transportation, address the firm which carried out the delivery; if the product functions incorrectly, address the dealer at once.
- Check up the package contents and availability of the warranty card. Make sure the warranty card has a shop stamp, a legible signature or the seller's stamp and purchase date, and the number of the wall mount corresponds to that in the warranty card. Remember: in case of warranty card loss or discrepancy of numbers you forfeit the right for warranty repairs.
- Before installing and using the wall mount, read this Manual carefully.



2. APPLICATION

C77-22 is designed for wall-mounting LED/LCD TV sets and monitors.

3. SAFETY PRECAUTIONS

- Do not exceed the maximum load specified in the Manual to avoid accidents or damage.
- Before installing the wall mount, read this Manual carefully and follow all the instructions when installing. To ensure safe and reliable mounting, it's recommended that installation be done by qualified specialists.
- Position your mount away from internal electric wires, water and gas pipes and other dangerous objects.
- Install the mount on walls of solid brick, concrete, wood or other material providing equivalent support.
- When installing the mount on a wooden wall, drill the holes as close as possible to the center of the board to provide secure support.
- Fasten the screws until they are fixed. Do not use electric tools for this purpose.
- For safety reasons, do not install the wall mount alone.

4. SPECIAL FEATURES

- VESA: 100 × 100/ 200 × 100/ 200 × 200 mm
- Diagonal compatibility: 26" 40"/66 101.6 cm
- · Level included
- -5° to +15° adjustable tilt angle
- Swivel angle: ~ ±90°
- Easy installation and mounting
- · High-strength polymer coating
- · Security locks
- · Guides for cable mounting

5. PACKAGE CONTENTS

- Mount 1 pc
- Mounting accessory kit 1 pack
- User's manual 1 pc
- Warranty card 1 pc




26" - 40" 66 - 101.6 cm



100 × 100 mm 200 × 100 mm 200 × 200 mm




85 ~ 250 mm

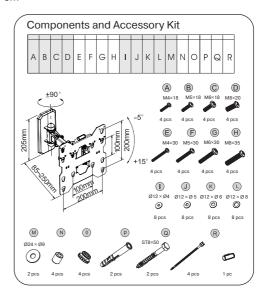


User's Manual


C77-22

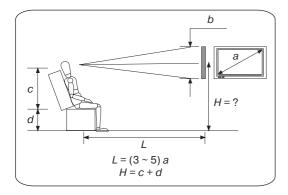


6. MOUNTING AND INSTALLATION


- Choose a wall to hang your mount on. It's recommended that the height H and the distance L from the viewer be calculated according to the formulas in the figures on the left.
- Then, place the mount against the wall and mark the spots where the holes should be drilled (see Fig. ①). In a wooden wall, drill two Ø 5 mm and 30-40 mm deep holes; in a brick or concrete wall, drill Ø 10 mm and 60 mm deep holes (Fig. ②).

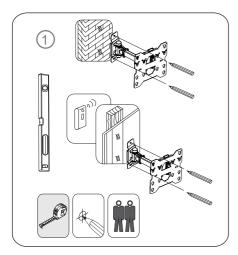


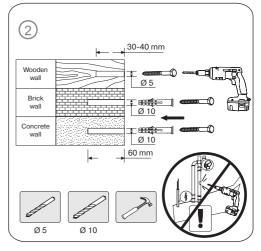



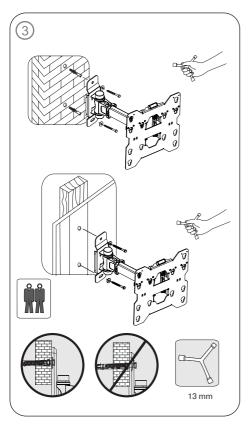


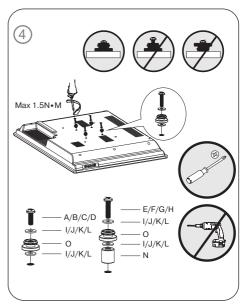

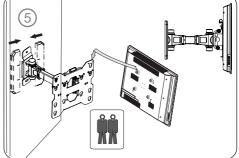


- Fix the mount on the wall using dowels (see Fig. 3).
- Fix the suitable screws and washers (included in the package) on the rear panel of your TV, as shown in Fig. ④.
- Mount the decorative plastic panels, as shown in Fig. ⑤, and hang your TV on the wall
- mount. The security locks will snap shut. Adjust the tilt and swivel angle as desired.
- Run the wires through the guides on both sides of the mount, as shown in Fig. **(®)**. For convenience, fasten them with cable ties.

C77-22

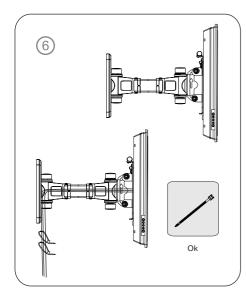

• To unmount your TV, release the security locks by pressing down on them (see Fig. ①). Lift your TV slightly and take the screws out of the holes.

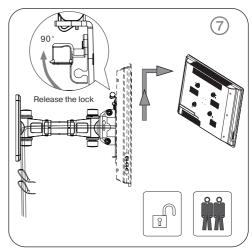

7. TECHNICAL SPECIFICATIONS

Parameter, measurement unit	Value
Diagonal compatibility, inch/cm	26 - 40/66 - 101.6
VESA range, mm	100 × 100/200 × 100/200 × 200
Maximum load, kg	35
Mounting type	tilt-swivel
Number of degrees of freedom	4
Distance from wall, mm	85 ~ 250
Coating type	high-strength polymer

Notes:

- Technical specifications given in this table are supplemental information and cannot give occasion to claims.
- Technical specifications are subject to change without notice due to the improvement of SVEN production.





Модель: С77-22

Импортер в России: ООО «СКАНДИТРЕЛ», 111024, РФ, г. Москва, ул. Авиамоторная, д. 65, стр. 1. Уполномоченная организация в России: ООО «РТ-Ф», 105082, г. Москва, ул. Фридриха Энгельса, д. 75, стр. 5. Условия гарантийного обслуживания смотрите в гарантийном талоне или на сайте www.sven.fi. Гарантийный срок: 5 лет.

Срок службы: 15 лет. Производитель: «СВЕН ПТ

Производитель: «СВЕН ПТЕ. Лимитед», 176 Джу Чиат Роуд, № 02-02, Сингапур, 427447. Произведено под контролем «Свен Скандинавия Лимитед», 48310, Финляндия, Котка, Котолахдентие, 15. Сделано в Китае.

Manufacturer: SVEN PTE. LTD, 176 Joo Chiat Road, № 02-02, Singapore, 427447. Produced under the control of Oy Sven Scandinavia Ltd. 15, Kotolahdentie, Kotka, Finland, 48310. Made in China.

® Registered Trademark of Oy SVEN Scandinavia Ltd. Finland.

C77-22